



FRONT SEAT COVER FITTING INSTRUCTIONS

Dear Customer,

Thank you for purchasing a Sperling Car Seat Cover, which has been manufactured from high quality fabrics. If for any reason you are having difficulty in properly fitting the seat cover, please call our helpful customer service team on: (02) 9821 1066

FITTING STEPS

5

1. Identify Each Piece
2. Seat Preparation
3. Fitting Base Cover
4. Fitting Back Rest Covers
5. Fitting Head Rests


ALLOW SUFFICIENT TIME



Sperling Seat Covers are tailored to fit, so we recommend allowing the right amount of time to fit the covers properly.

- Fitting involves more than just slipping the covers on.
- Align the seams to the edges and tuck the covers before fastening.
- Fasten the covers to keep them in place.

PLEASE NOTE: The ties are designed to keep the seat covers in place, do not over tension when fitting.

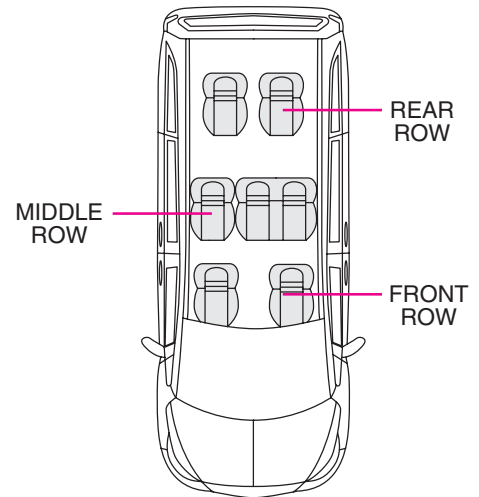

Allow 30-45 minutes fitting time for each row



CAUTION

Use caution when feeding straps through under seat, sharp edges could be present.

AIRBAG DISCLAIMER:

⚠ IMPORTANT AIRBAG INFORMATION

This product is suitable for cars with or without static seat side airbags. Correct initial fitting & securing of this seat cover to your vehicle is essential to allow deployment of seat airbag. Incorrect fitting can prevent the seat airbag from being correctly deployed.

These seat covers must only be used for cars that have an integrated side airbag where the unfolding of the airbag takes place using an inflation control seam. The airbag deploys from the centre of the side of the seat closest to the car door. (Please note the "airbag deployment zone" in the illustration). The seam is located in the area from forward edge (A) to the outside rear edge (B) of the seat back. Airbag labels and seams are sewn on both sides of the seats.

If the seat cover is moved from its intended placement for any reason, you must ensure it is placed in its correct position before use. See illustration and fitting instructions.


If for any reason the side airbag fails to open, the manufacturer will not be held responsible.



FRONT SEAT COVER FITTING INSTRUCTIONS CONTINUED


1. IDENTIFY EACH PIECE

Unpack the covers and lay out to identify each piece before you fit them. You can line up seat belt holes visually. The back rest sections are manufactured with airbag break away seams on both sides of each back rest Fig 12. Next look for the base label - DRIVER or PASSENGER. Often the bases may look the same but there are slight differences to the measurements.

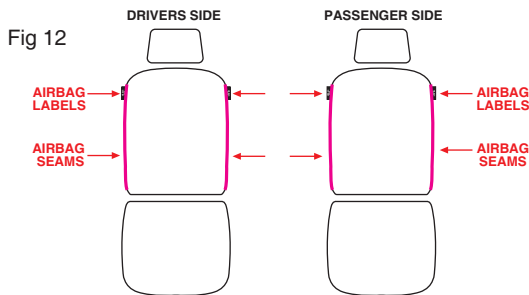


2. SEAT PREPARATION

Remove Head Rests

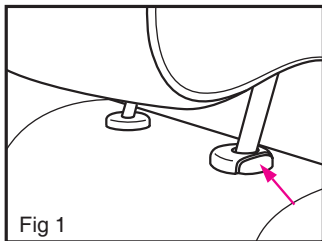

1. Depress button

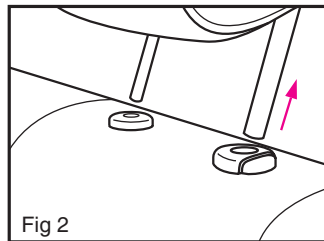



2. Slide out head rest

Note some head rests might require an additional step to disengage the headrest from the seat. Check owners manual for more information. Modern vehicles may have active head rests and may not be removable. If this is the case our pattern has been designed to be fitted without removal Fig 1 & 2



3. FITTING BASE COVER

Unhook Flap


Many modern vehicles today have a protective flap at the base of the backrest. If your vehicle has one this needs to be temporarily moved out of the way to feed through the ties. Fig 3 & 4

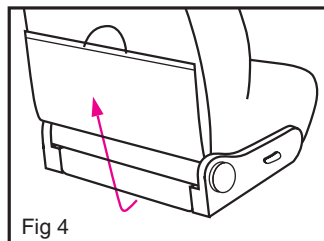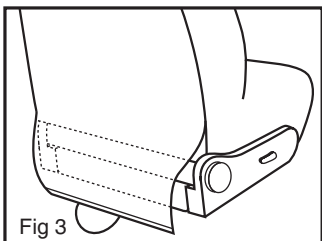


Fit the base cover by aligning the seam edges with the edge of the seat, push the D ring through back rest and base section Fig 5A. Feed front tie Fig 5B underneath seat towards rear. Side velcro ties can either be threaded between plastic side trim & cushion or wrapped around plastic sides. Then from under the seat feed B through A Fig 5. Mate C & D together Fig 6 after removing red fabric.

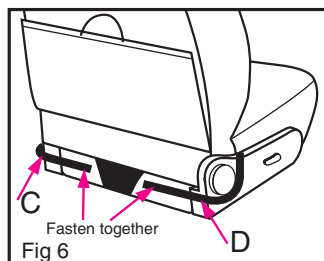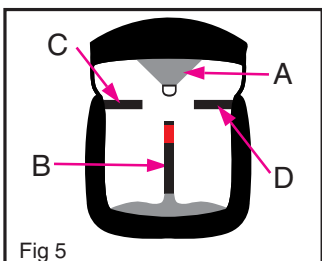

4. FITTING BACK REST COVERS

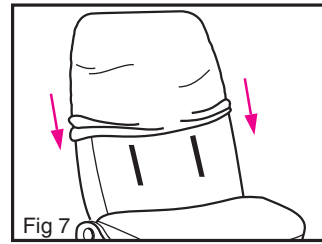


Fit the backrest section of the seat cover by sliding it down back and forth until the top of the cover reaches top of the seat. Align seams with edge of seat, fit so face panel is not twisted and smooth out fabric against seat to reduce creases Fig 7.

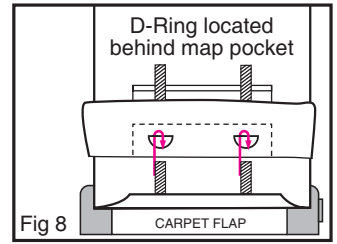


Feed the front velcro through backrest and seat base so the velcro can be connected at the rear of the seat. From the rear feed velcro through plastic D ring located behind map pocket then connect on to itself Fig 8. Then connect male velcro to carpet flap. If no carpet flap fitted on seat then cut velcro off.

Tying Back Rest Covers

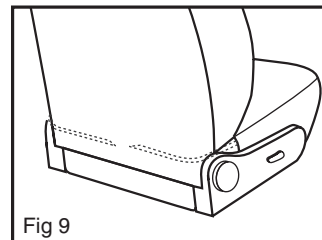


At this stage of fitment you can choose to replace the flap and feed the ties either side of the flap Fig 9.

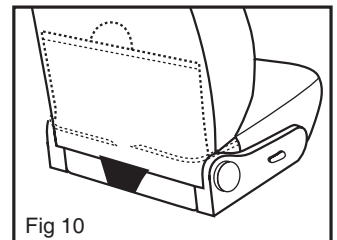

OR leave the flap folded up inside the seat cover and tie the front backrest ties to the rear backrest ties Fig 10.

5. FITTING HEAD RESTS

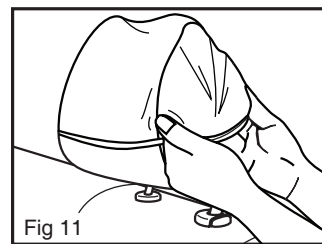

Refit head rest into the seat before fitting the head rest cover. Slide head rest cover on from side to side and smooth any wrinkles.

Sperling Seat Covers will provide years of protection for your car seats. To get the best out of your seat covers below are some important tips:

1. Properly fitted seat covers will not slip and slide and will last longer than poorly fitted seat covers.
2. The ties are designed to keep them in place, they do not need to be over tensioned.
3. Tuck and tidy straps, consider if you cut ties it might be hard to fit again if you wash your covers.
4. After 1 month it is recommended to re-tension ties if required.

Thank you for choosing Sperling Made to Order Seat Covers.