



SEAT COVER FITTING INSTRUCTIONS - MIDDLE AND REAR ROWS

Dear Customer,

Thank you for purchasing a Sperling Car Seat Cover, which has been manufactured from high quality fabrics.

If for any reason you are having difficulty in properly fitting the seat cover, please call our helpful

customer service team on: (02) 9821 1066

FITTING STEPS

5

1. Identify Each Piece
2. Seat Preparation
3. Fitting Base Cover
4. Fitting Back Rest Covers
5. Fitting Head Rests

 
ALLOW SUFFICIENT TIME

Sperling Seat Covers are tailored to fit, so we recommend allowing the right amount of time to fit the covers properly.



- Fitting involves more than just slipping the covers on.
- Align the seams to the edges and tuck the covers before fastenening.
- Fasten the covers to keep them in place.

PLEASE NOTE: The ties are designed to keep the seat covers in place, do not over tension when fitting.

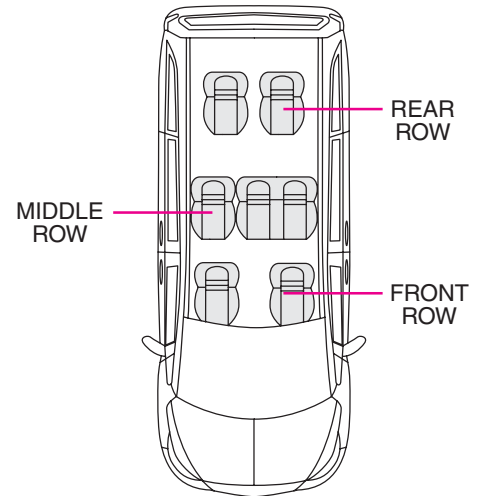

Allow 30-45 minutes
fitment time for each row

 


CAUTION

Use caution when feeding straps through under seat, sharp edges could be present.


1. IDENTIFY EACH PIECE

Unpack the covers and lay out to identify each piece before you fit them. You can line up seat belt holes visually.

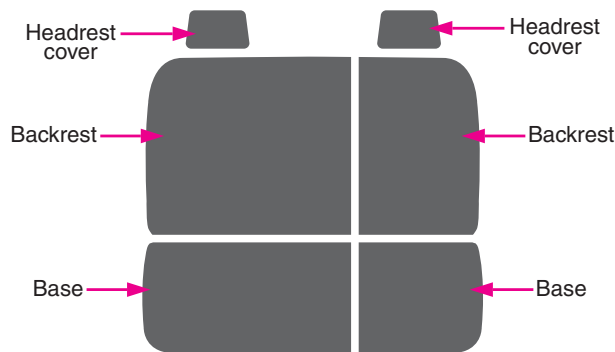


2. SEAT IDENTIFICATION

 
Middle & rear seat configurations vary considerably from vehicle to vehicle. Some of the more common configurations are illustrated below. It is important to identify your type, don't worry if yours is not listed here, your pattern will match your vehicles configuration.

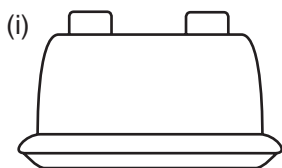


Full Bench

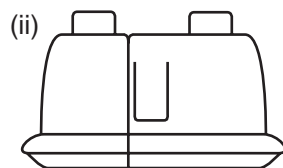 

40/60 Split

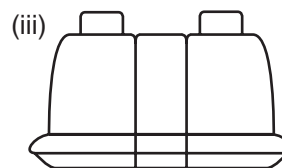 

40/20/40 Split

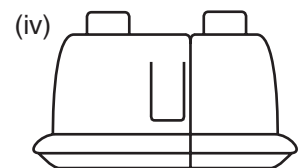 

60/40 Split



Once you have determined your seating configuration please refer to the correct fitting instructions. Generally there are one of 2 options: split fold and full bench seats.

MIDDLE & REAR SEAT COVER FITTING INSTRUCTIONS CONTINUED

OPTION 1 - SPLIT FOLD SEATS

In most cases split fold seats do not require to be removed from the vehicle to fit the seat covers as the base and backrest sections tilt on a hinge making for easy fitment.

  
Simply locate the seat release mechanism, usually found at the front of base sections and top of backrest sections. Example below (Fig 1):

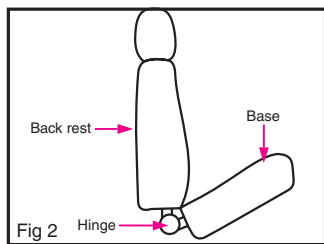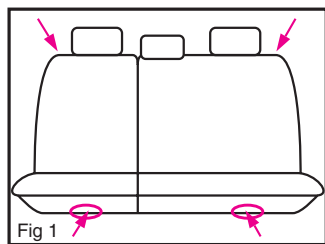



With the base elevated (Fig 2) fit the seat cover. There is no need to remove the base from the car with these configurations.

FITTING BASE COVER

 Fit the base cover by aligning the covers seam edges with the edge of the seat, from underneath align ties and tie them together using a bow as pictured.

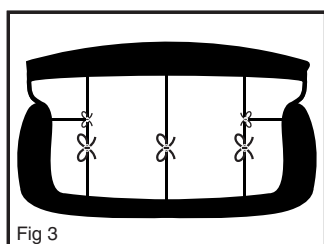

REMOVE HEAD RESTS

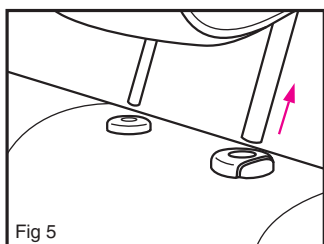 
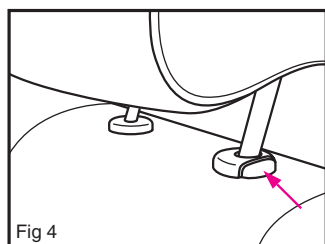 


1. Depress button

2. Slide out head rest

Note some headrests might require an additional step to disengage the headrest from the seat. Check owners manual for more information.

  
FITTING BACK REST COVERS

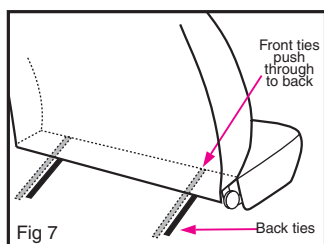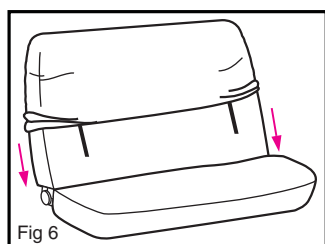



Fit the backrest section of the seat cover by sliding it down back and forth until the top of the cover reaches top of the seat. Align seat cover seams with the edge of seat and line up rear armrest and seat belt receiver allowances before fastening with the ties. Ensure the front face panel is not twisted and smooth out the fabric against the seat to reduce creases (Fig 6). Feed the front ties through backrest and seat base so the ties can be connected at the rear of the seat by tying a bow (Fig 7).

FITTING HEADRESTS

 Refit headrest into the seat before fitting the headrest cover. Slide headrest cover on from side to side and smooth any wrinkles.


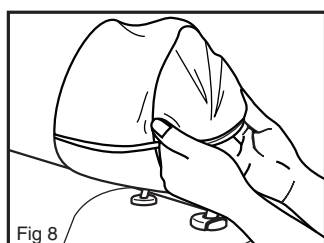


INTEGRATED SEAT BELTS

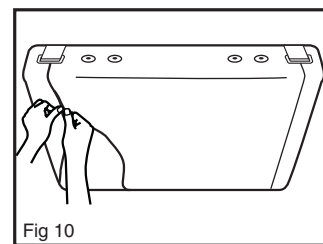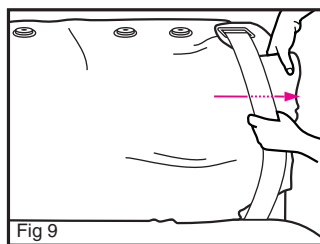  

Some vehicles have integrated seat belts. To fit the seat cover separate the velcro section before sliding the cover over the seat. The velcro section allows the cover to be passed through and behind the seat belt and then fastened on the rear side of the backrest.

  OPTION 2 - FULL BENCH

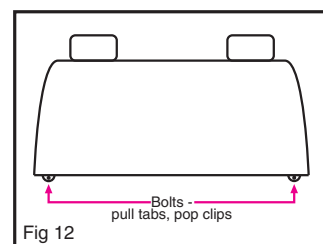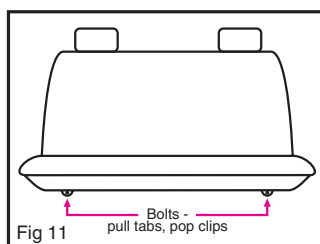


A full bench seat will usually require to be removed from the vehicle to fit the seat covers.

Fastening points may include bolts, pull tabs or pop clips. These are usually located at the front of the base section. Note: Pop clips can require some force to disengage and re-engage. Once the base is removed the backrest fastening points will be visible, repeat the process. If the backrest is hinged removal is not required as it can be tilted forward to fit the covers.

FITTING BASE & BACKREST SECTION

Remove headrests (See Fig 4 & 5). Place a drop cloth on the ground, next to vehicle to place the seats on to fit the covers. This will protect seats from getting scuffs & abrasions when fitting the covers.

 Fit the base cover by aligning the seams of the cover with the edges of the seat, match up the allowances for headrest and seat belt holes. Secure the covers by aligning the ties underneath the seat base and tying with a bow.

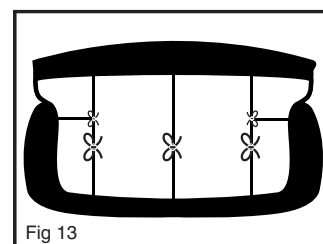

Repeat for backrest cover and refit to vehicle.

Sperling Seat Covers will provide years of protection for your car seats. To get the best out of your seat covers below are some important tips:

1. Properly fitted seat covers will not slip and slide and will last longer than poorly fitted seat covers.
2. The ties are designed to keep them in place, they do not need to be over tensioned.
3. Tuck and tidy straps, consider if you cut the ties it might be hard to re-fit again if you decide to wash your covers.
4. After 1 month it is recommended to re-tension ties if required.

Thank you for choosing Sperling Made to Order Seat Covers.