




PRECISION FIT FLOOR MAT FITTING INSTRUCTIONS

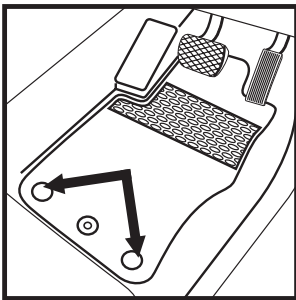


STEP 1:
Lay floor mat in place and position outside holes in mat to accommodate existing vehicle lock downs.

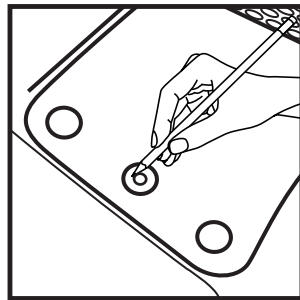

STEP 2:
Mark the carpet with a pencil through the centre lock down point.

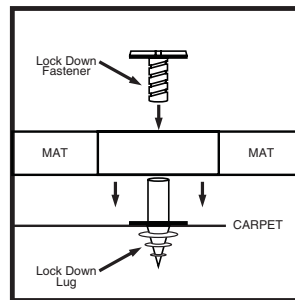

STEP 3:
Remove mat and screw in lock down lug directly into carpet/floor lining.

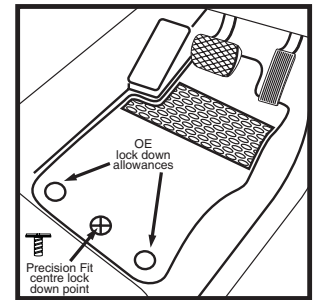

STEP 4:
Re-position the floor mat as per step 1. Use lock down fastener to secure mat via centre lock down point.

CAUTION:

- Do not place mats over the top of another mat.
- Always ensure the drivers side mat does not interfere with any of the pedals.
- Ensure the drivers mat is always secured using the Precision Fit Lock Down System.
- 2 Lugs supplied with Precision Fit Mats - Lug requirements will vary by vehicle.