




# UNIVERSAL FLOOR MAT FITTING INSTRUCTIONS WITH TRIM LINES

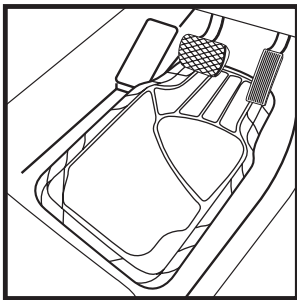

**STEP 1:**  
Lay floor mat in place  
and work out where you  
need to trim mat to make  
it fit correctly.

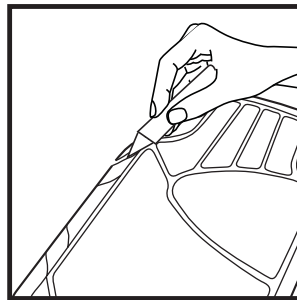

**STEP 2:**  
Use scissors or a stanley  
knife to cut mat to size.

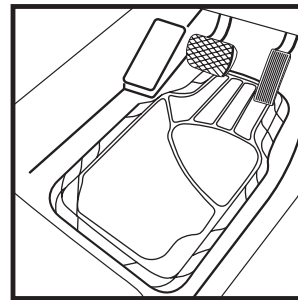

**STEP 3:**  
Lay floor mat in place.

## **CAUTION:**

- Do not place mats over the top of another mat.
- Always ensure the drivers side mat does not interfere with any of the pedals.
- Universal to fit most cars.
- Trim lines for custom fitting - use caution when using scissors or Stanley knife.